

ROAD ANGEL™

PURE



QUICK START GUIDE

[roadangelpure.co.uk](http://roadangelpure.co.uk)

Version V.1.2

# INTRODUCTION

Congratulations on your purchase of the latest addition to the ROAD ANGEL™ range, the 'PURE'.

Stay connected to us via



Road Angel Group



@RoadAngelGroup



@Roadangelgroup



ROAD ANGEL™ PURE is a standalone GPS camera and accident blackspot locator. It uses the latest global positioning satellite technology to give you audible and visible alerts as you approach hazardous sections of road:

- Fixed safety cameras
- Average speed monitoring zones
- Mobile safety camera vans
- Accident blackspots (as designated by the Police and Local Authorities)
- Mobile laser guns
- Primary schools, congestion charging zones and unprotected level crossings

With over 250,000 miles of road around the UK, knowing the speed limit is often guesswork, that's why ROAD ANGEL™ PURE also has an onboard database of road speed limits. Provided by Here™, the road speed information is presented in a circular road speed sign at the bottom left of the device.

# PURE

# OVERVIEW

The ROAD ANGEL™ PURE has two buttons, thus simplifying its operation and helping to avoid the temptation to adjust the equipment while driving. All configuration is done by connecting via your smartphone, PC or Mac, making the menus easier to navigate.

**Long Press = Power On/Off**

**Short Press = UI Select Mode**



Once the unit has been registered and your subscription has been purchased, the road angel database will automatically sync to your device with 24-48hours, this will enable full functionality of the device.

 


The 5 Day Trial – upon first use of the device you will have the option to activate a 5 day trial giving you the option to test all the features the Pure has to offer. After the 5 day trial is over you will need to purchase a subscription to continue full use and protection the pure Offers.

**Please read the instructions to ensure your ROAD ANGEL™ PURE is set up correctly.**

PURE

# DOWNLOAD THE APP

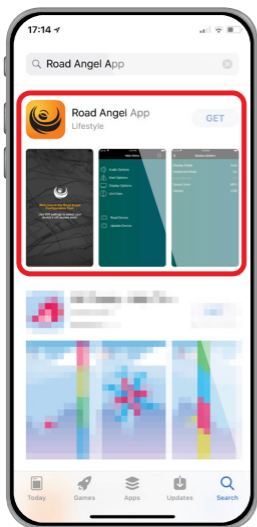

Download the ROAD ANGEL™ App from your smartphone's App source. (e.g. iTunes or Google Play).



Activate the ROAD ANGEL™ App.

# CHARGING THE UNIT

With the unit switched off, connect the device to the mains charger to charge the internal battery, this may take up to 12 -14 hours, possibly overnight.



# REGISTER & SUBSCRIBE ONLINE

A Subscription must be purchased to enable all database updates. You can do this via our website [www.RoadAngelGroup.com](http://www.RoadAngelGroup.com) by using the serial number on the base of the unit.



Serial Number

1. Go to [www.roadangelgroup.com](http://www.roadangelgroup.com)
2. Click on the Registration link.
3. Follow the on-screen instructions.  
As part of this registration process, you will be prompted to purchase subscriptions for the Safety Camera, Blackspot and Road Speed limit updates.
4. If you already have a pre-paid subscription, please call us to activate.

You can also register by phone:

**0330 320 3030**

(Mon-Fri 9am-5pm).

# CONFIGURATION <sup>1</sup>

There are two ways to configure the ROAD ANGEL™ PURE;

1. **Smartphone or Tablet:-** Enable WiFi mode on the ROAD ANGEL™ PURE to read and adjust the settings via the ROAD ANGEL™ App on your smart phone. The App can be downloaded from your App supplier, Google Play or Apple iTunes.

2. **Computer:-** Connect the device to a PC or Mac with the supplied USB cable and download the ROAD ANGEL™ PURE Update Software from our website.

Both methods use the same menus outlined below;

## ALERT

This menu allows users to select which alerts they wish to be notified of including, Accident Blackspots, Camera Van, Congestion, School Zone, Laser detectors, Overspeed, Overspeed Adjust, Alerts distance, Fatigue & Red Light.

## DISPLAY

Brightness, Hardwired Mode, (If your device is fitted to your vehicle, as opposed to being plugged into your vehicle's cigarette lighter), Auto Stand-By, Speed Units (MPH/KPH) and Vehicle type, (e.g. Car, Tow, LGV, HGV, LMH, HMH, SBUS, LBUS).



Press & Hold



The ROAD ANGEL™ PURE is now ready to connect.

PURE

 
# CONFIGURATION <sup>2</sup>

## SOUNDS

There is a range of audio alerts for specific events and the sound associated with each one can be customised. For example, you might have a simple high tone for a school zone and a low tone for rail tracks and a double beep for camera vans, you will also be able to set the volume for each alert.

- Button Beep
- System Beep
- Over Speed Beep
- Blackspot Alert
- Camera Alert
- Congestion Alert
- School Zone Alert
- Laser Alert
- Red Light Alert
- Railway Alert

See full online guide:  
[RoadAngelPure.co.uk](http://RoadAngelPure.co.uk)

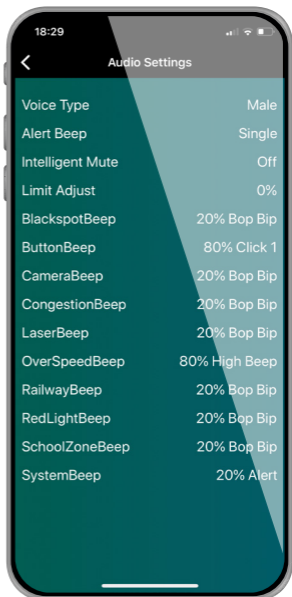


Here are just some of the Audio Settings you can pre-configure from the menu of your Smartphone or Tablet



# DISPLAY ELEMENTS 1
 
## SCREEN MODES

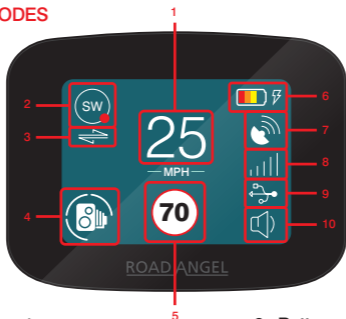

1. Road Speed
2. Compass
3. Communicate with Server
4. Alert and Proximity Meter
5. Speed Limit
6. Battery
7. GPS Signal
8. SIM Signal Level
9. USB (See Note)
10. Speaker Auto/Mute

The USB symbol will show if your device needs a firmware update.



# DISPLAY ELEMENTS <sup>2</sup>



Amber means in alert zone but under speed  
(subject to parameter `_10, 0, +5` or `+10%`)

Red means over the speed limit



Camera

Average  
Speed  
Camera

Blackspot  
Hazard

Red  
Light



Red Light  
Dual

School

Congestion  
zone

Railway

Laser Gun  
Speed Monitor



Camera  
Van

Live Van

Proximity  
200 Metres

Proximity  
300 Metres

Proximity  
400 Metres